




INTAKE SYSTEM

INSTALLATION INSTRUCTIONS

21-884C
MAZDA
2021 3
L4-2.5L

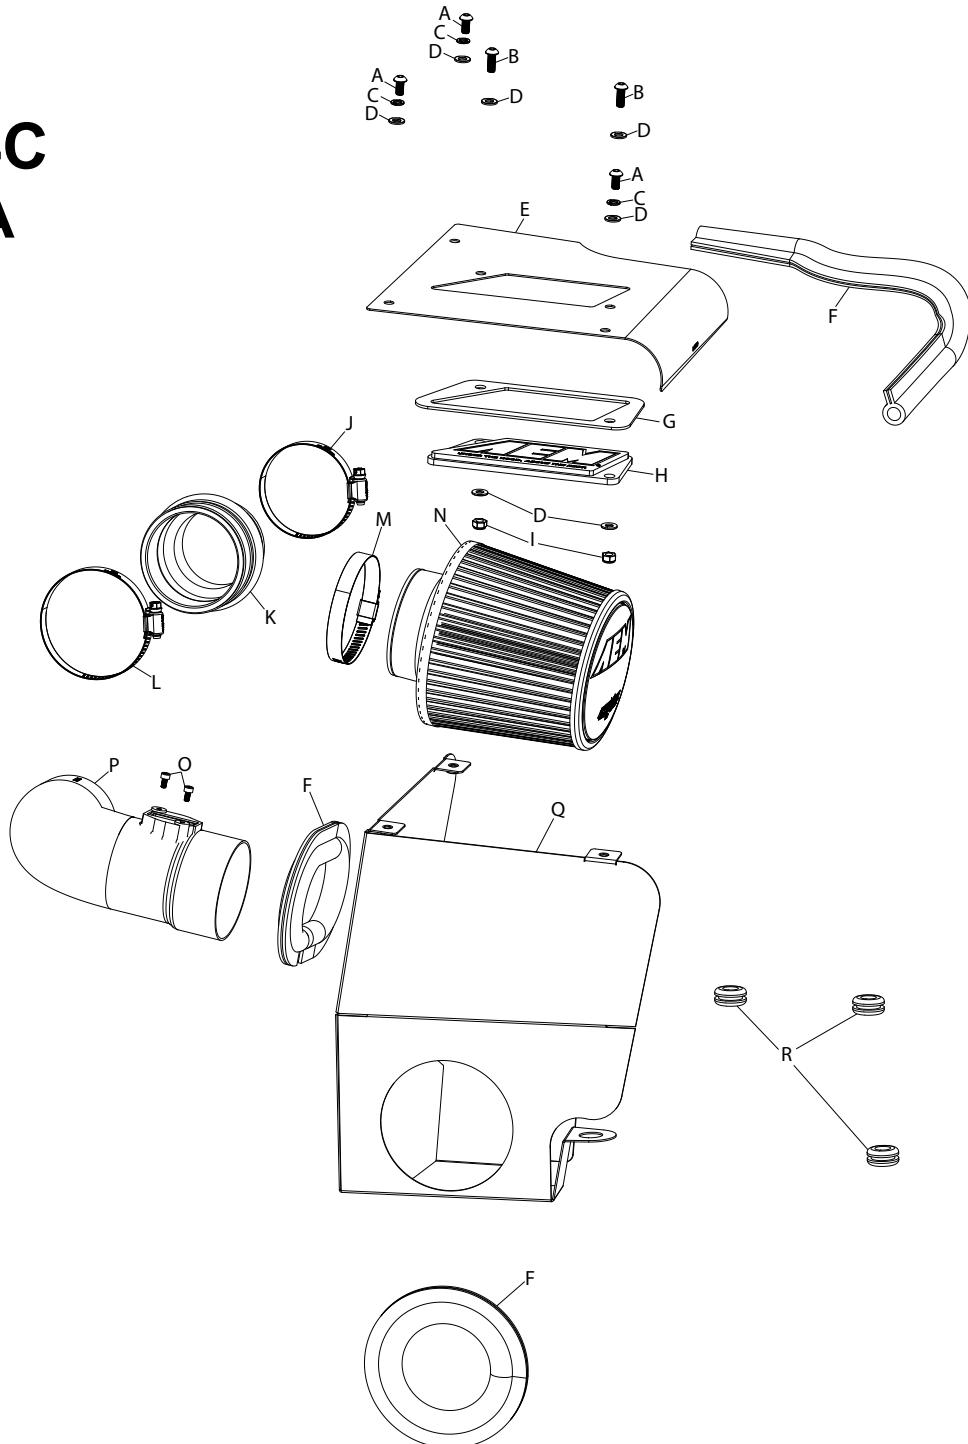

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See aemintakes.com for CARB status on each part for a specific vehicle

TOOLS NEEDED:

Ratchet
 Extension
 10mm socket
 3mm allen key
 4mm allen key
 flat blade screw driver
 flat blade screw driver
 side cutters

PARTS LIST:

Description	Qty.	Part #	Description	Qty.	Part #	Description	Qty.	Part #
A BOLT; M6-1 X 12MM	3	07794	G SPACER; CLEAR BADGE	1	7-364	M 1/2" BNDHOSE CLAMP	1	9456
B SCREW; M6 X 20MM	2	KIT20BHC3060	H PLATE; AEM LOGO, CLEAR	1	8-211-1	N AIR FILTER	1	21-2110DK
C WASHER; M6 SPLIT LOCK	3	1-3025	I NUT; 6MM NYLOCK	2	07512	O BOLT; M4-.7 X 8MM	2	07733
D WASHER; 6MM FLAT	7	08269	J HOSE CLAMP; #44	1	08577	P TUBE; 3"OD X 11"L (AL)	1	25874C
E LID	1	073306	K HOSE; HUMP 2.5" /3" X 3"	1	5-574	Q HEAT SHIELD	1	073305
F EDGE TRIM; 55"L	1	102480A	L HOSE CLAMP; #48	1	08601	R GROMMET; 1"OD, 1/2"ID	3	08064

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Read and understand these instructions BEFORE attempting to install this product. Failure to follow installation instructions and not using the provided hardware may damage the intake tube, throttle body and engine.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Remove the two bolts that secure fresh air intake duct to the core support.



3. Loosen the hose clamp that secures the factory intake hose to the throttle body. Disconnect the mass air sensor electrical connection and unhook the wiring harness from air filter housing. Remove the air filter housing lid and intake hose from the vehicle.



4. Pull up the lower air filter housing to dislodge it from the mounting grommets and remove it from the vehicle.



5. Install the provided grommets into the heat shield as shown.



6. Cut the edge trim into sections as shown.



7. Install the edge trim onto the heat shield as shown.



8. Release the tab that locks the fresh air duct to the lower air filter housing then rotate the fresh air duct counterclockwise and remove it from the housing.



9. Install the fresh air duct into the AEM heat shield.



10. Install the heat shield assembly onto the mounting posts and secure the fresh air intake duct with the factory hardware.



11. Install the provided hump coupler and secure with the provided hose clamp.



12. Remove the mass air sensor from the factory air filter housing and install it into the AEM intake tube and secure with the provided hardware.



13. Install the AEM intake tube through the heat shield and into the coupler. Secure the coupler with the provided hose clamp.



14. Install the air filter onto the intake tube and secure with the provided hose clamp.



15. Install the 17" edge trim onto the heat shield lid as shown. Install the AEM window into the heat shield lid using the provided hardware.



16. Install the heat shield lid onto the heat shield using the provided hardware.



Reassemble Vehicle

Position the inlet pipes for the best fitment. Be sure that the pipes or any other components do not contact any part of the vehicle. Tighten the rubber mount, all bolts, and hose clamps. Check for proper hood clearance. Re-adjust pipes if necessary and re-tighten them. Inspect the engine bay for any loose tools and check that all fasteners that were moved or removed are properly tightened. Reconnect negative battery terminal and start engine. Let the vehicle idle for 3 minutes. Perform a final inspection before driving the vehicle.

Service and Maintenance

AEM Induction Systems requires cleaning the intake system's air filter element every 100,000 miles. When used in dusty or off-road environments, our filters will require cleaning more often. We recommend that you visually inspect your filter once every 25,000 miles to determine if the screen is still visible. When the screen is no longer visible some place on the filter element, it is time to clean it. To clean, purchase our Synthetic air filter cleaner, part number AEM-1-1000 and follow the easy instructions. Use window cleaner to clean your powder coated AEM® intake tube.

NOTE: DO NOT USE aluminum polish on powder coated AEM® intake tubes.

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See aemintakes.com for CARB status on each part for a specific vehicle

AEM Air Intake System Warranty Policy

AEM® warrants that its intake systems will last for the life of your vehicle. AEM will not honor this warranty due to mechanical damage (i.e. improper installation or fitment), damage from misuse, accidents or flying debris. AEM will not warrant its powder coating if the finish has been cleaned with a hydrocarbon-based solvent. The powder coating should only be cleaned with a mild soap and water solution. Proof of purchase of both the vehicle and AEM intake system is required for redemption of a warranty claim.

This warranty is limited to the repair or replacement of the AEM part. In no event shall this warranty exceed the original purchase price of the AEM part nor shall AEM be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is nontransferable. Improper use or installation, use for racing, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM. Warranty returns will only be accepted by AEM when accompanied by a valid Return Merchandise Authorization (RMA) number. Credit for defective products will be issued pending inspection. Product must be received by AEM within 30 days of the date RMA is issued.

If you have a warranty issue, please call (800) 992-3000 and our customer service department will assist you. A proof of purchase is required for all AEM warranty claims.