

Black PART# 096049  
Red PART# 096048



**GrimmSpeed Install Guide Series**  
**Installing the GrimmSpeed 15+ Subaru WRX/STI Fender Shrouds**  
**Updated 8/20/19**



**Introduction:**

This guide will illustrate the installation of the GrimmSpeed 2015+ WRX/STI Fender Shrouds. The difficulty here is easy, so take your time and enjoy the job! Expect to spend 5-10 mins, depending on level of experience.

**Tools:**

The tools listed below are suggested for this task.

- 4mm Allen Wrench
- Flathead Screwdriver


Take care to follow the installation instructions carefully!

If you have any questions don't hesitate to contact us directly!

Support@GrimmSpeed.com | 612-379-0000

## Procedure:

1. Begin by collecting your tools.
2. Pop your hood and locate the two pop clips on your OEM fender liner

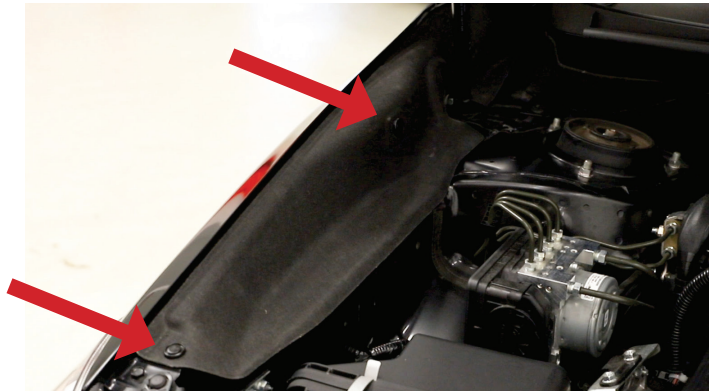

3. Use your flathead screwdriver to pop the clips and remove them.



4. With the clips removed, you can remove the OEM fender liner.



5. Repeat the same steps for the other side.




6. Fit your new fender shroud into place by lining up the mounting holes to the fender.



7. Reuse an OEM pop clip on the top mounting hole.



8. Use included hardware to secure the Shroud in place.

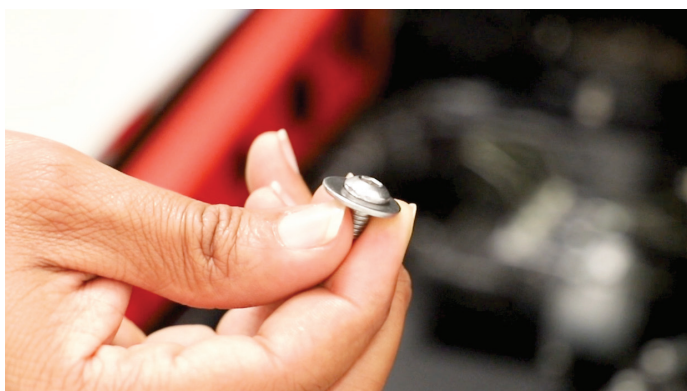



9. Tighten the nut and bolt using a 4mm allen wrench.



10. Repeat the same steps when installing on the driver side.

11. You are done! Enjoy your new GrimmSpeed Fender Shrouds!



If you have any questions don't hesitate to contact us directly!  
Support@GrimmSpeed.com | 612-379-0000