



1967-68 CAMARO / FIREBIRD BILLET ALUMINUM GAUGE MOUNTING SYSTEM INSTALLATION INSTRUCTIONS (5" AUTO METER STREET ROD SERIES)

Model 7050

Included hardware:


Four 10-32 x 3/4" machine screws

Four 10-32 x 1/2" machine screws

Three 8-32 x 1/2" type F self tapping screws

Two #6 x 3/8" type B sheet metal screws

1. Remove the stock bezel from your vehicle.
2. The screw retainer clips that are located on the lower outside corners of the stock bezel must be transferred to reproduction bezel, if a reproduction bezel is being used.
3. Place the polished aluminum gauge panels face down on a soft surface. Install the gauges into the gauge panel & secure the two gauge mounting rings using the four 10-32 x 1/2" machine screws. The flat ends of the gauge mounting rings should be on the bottom. These can be assembled in the palm of your hand, if a soft surface is not available.
4. Place the plastic bezel face down.
5. Place the assembled gauge panels into the stock bezel.
6. Attach the two assembly mounting panels the stock bezel using the three 8-32 x 1/2" F type self tapping screws & the two #6 x 3/8" type B sheet metal screws.
7. Secure the assembled gauge panels by screwing the provided 10-32 x 3/4" screws through the tapped locations in assembly mounting panel. Do not overtighten.
8. Install the completed assembly in your vehicle.
9. Wire the gauges (refer to instructions provided by gauge Auto Meter).

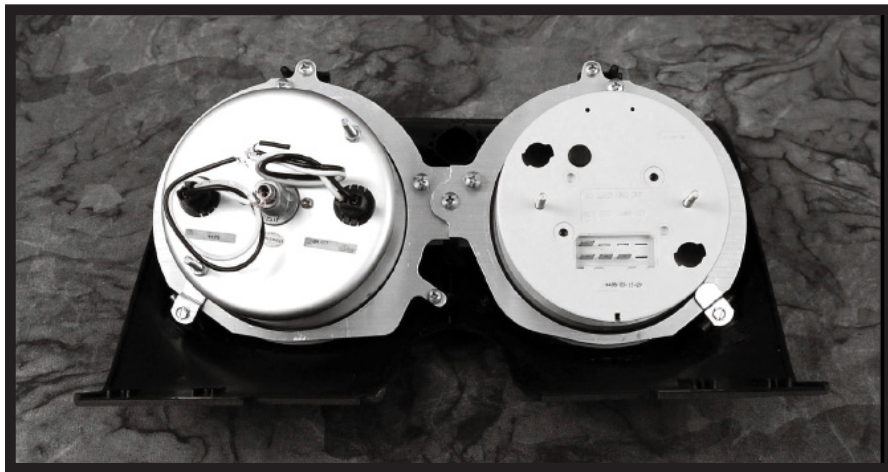

866-248-6356

www.autometer.com

2650-1868-77 12/7/15