



Description: LED Taillight  
Part Number: 311007 - 311008 - 311009  
Application: 03-06 Chevy Silverado



Tools Needed:  
Phillips Screw Driver



Step 1: Lower the tail gate  
exposing the two screws.




Step 2; Remove the upper and  
lower screws



Step 3: Remove the taillight  
by pulling straight out.



Step 4: Remove all 4 sockets  
from the taillight housing.

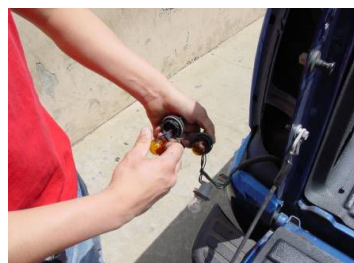

Step 5: Remove the bulbs  
from the two black sockets.



Step 6: Place the resistor in  
a safe location in the housing.



Step 7: Connect the pigtails to the stock sockets.



Make sure the wires match:  
Black to Black



Step 8: Connect the resistor to the taillight housing.



Step 9: Place the LED taillight into the truck housing, secure with screws.



Make sure all functions are working properly before driving.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.