



# Silver Bullet

Throttle Body Spacer

PN 46-37001

## Important!

Please verify the parts list and read all instruction steps before you begin installation.  
( Civic Si shown in photo)


Make	Model	Year	Engine
HONDA	CIVIC Si	12-15	L4-2.4L
HONDA	ACCORD	08-17	L4-2.4L
ACURA	TSX	09-15	L4-2.4L
ACURA	ILX	13-15	L4-2.4L

**NOTES:** Takeda Intake system (TM-1018P) will require slight modification to fit with this throttle body spacer: On the throttle body side of the intake tube, cut 3/4" off for a perfect fit.

- Step 1. Remove the OE intake tube from the vehicle using an 8mm nut driver. Disconnect the vent line from the intake tube.
- Step 2. Remove the throttle body by removing the (4) M8 screws and the M8 screw securing the bracket.
- Step 3. Insert the new Silver Bullet throttle body spacer and provided gasket in between the throttle body and manifold as shown (The "Air-In" side should face the throttle body).
- Step 4. Fasten the throttle body assembly using the (4) furnished M8 screw, lock washer, and a flat washer. Tighten the screws to 10 Nm (89 lb/in). Reinstall bracket using OE bolt.
- Step 5. Reinstall the intake tube. Make sure to tighten all of the clamps and reconnect the vent hose.

Your install is now complete! Make sure to retighten all bolts and clamps after 100 miles of driving.

**NOTE:** This part has been exempt by the California Air Resources Board (C.A.R.B.) and issued an Executive Order (E.O.). If part does not come with C.A.R.B. E.O. sticker already placed on device, it is necessary to place the sticker on or near the device on a smooth, clean surface. The C.A.R.B. E.O. sticker is required to pass the smog test inspections in the state of California.

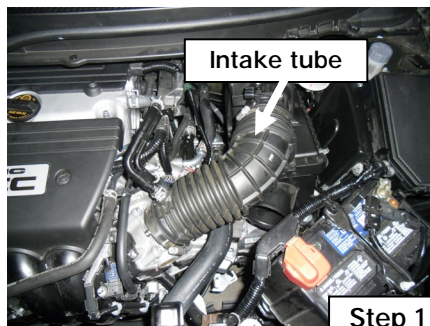

Step 1



Step 2



Step 3



Step 4



Step 5

### Parts List

- 1 Silver Bullet Spacer
- 1 Gasket
- 4 M8 x 90mm screws
- 4 M8 flat washers
- 4 M8 lock washers

advanced FLOW engineering

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

www.aFePower.com

Last Updated:  
06/15/20 CDS