




INSTALLATION INSTRUCTIONS

MAKE: Ford
MODEL: F-150
YEAR: 2018 - 2020
ENGINE: V6-3.0L (td)
FITS: CC/SB & EC/SB 145" WB
CC/LB 156.8" WB

DPF-Back Exhaust
49-43108-B (Black Tips)
49-43108-H (Brushed Tips)

Tail-Pipe Assembly

05-144632B (Black Tips)
05-144632H (Brushed Tips)

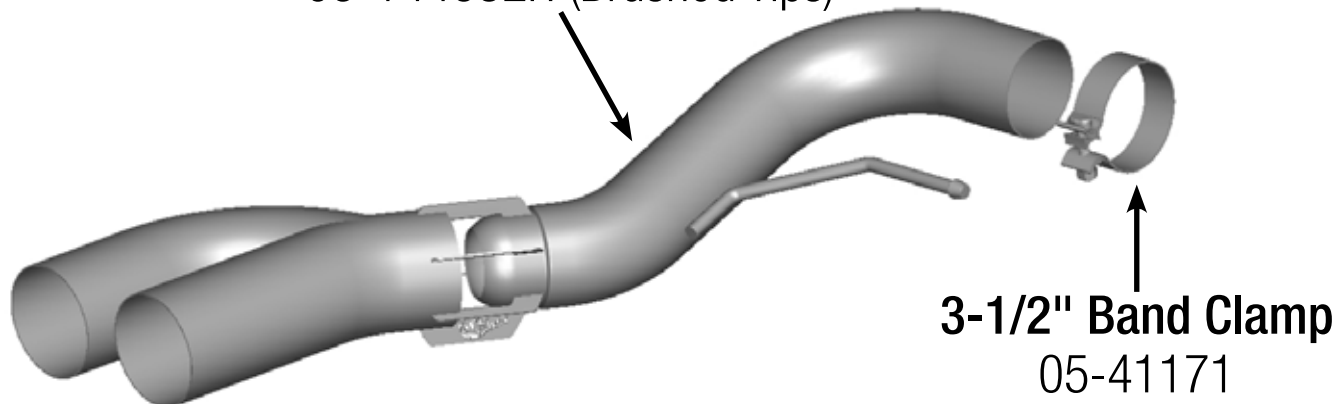

Caution: aFe recommends professional installation on our products. Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

- Step 1:** **(Read instruction prior to installation.)** It is recommended to not fully tighten everything down until the system has been installed. Leave loose for adjustability.
- Step 2:** Remove the O.E exhaust muffler section.
- Step 3:** Install the aFe POWER tail-pipe assembly using the provided 3-1/2" clamp.
- Step 4:** Adjust the exhaust system to desired position and tighten down all clamps.
- Step 5:** Your Installation is now complete it is recommended to re-check and re-tighten exhaust components 50-100 miles after installation.