



INSTALLATION INSTRUCTIONS

MAKE: Chevrolet / GMC

MODEL: Silverado / Sierra


YEAR: 2009-2019

ENGINE: V6-4.3L & V8-4.8L/5.3L

WHEELBASE(S): Standard Cab/Short Bed (119" WB) & Standard Cab/Long Bed (133" WB/8 Ft. Bed)

NOTE: Does NOT fit Hybrid models.

**409 Stainless Steel
Cat-Back Exhaust
49-44072-P (Polished Tips)
49-44072-B (Black Tips)**

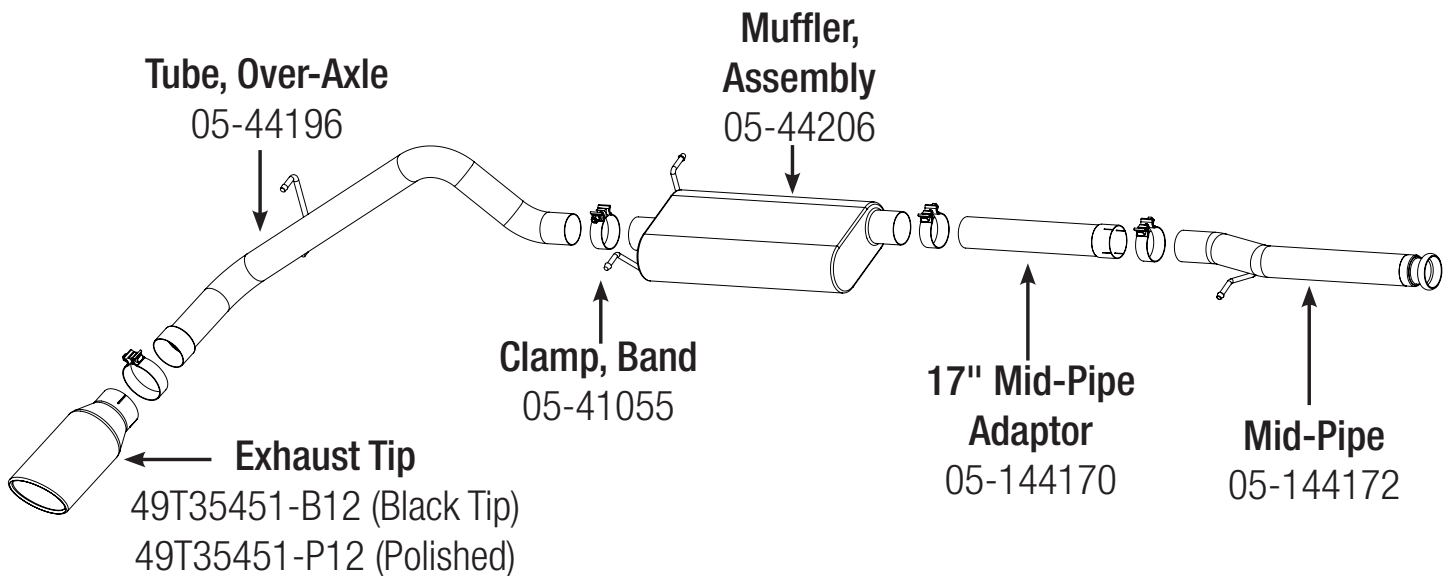

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**

Step 1: (Read Instructions prior to installation) Remove your stock exhaust up to the catalytic converter from the rear of your truck working your way forward. Take caution not to damage the factory hardware and isolation mounts as they will be reused. It is recommended to not fully tighten the clamps until the entire system has been installed.

Step 2: For faster installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.

Step 3: Install mid-pipe using the O.E. clamp. You will have to release the locking tab with a small screwdriver. This is best done after removing the stock exhaust. Now install the mid-pipe.

NOTES: – On 8.2 ft. beds extension pipe will be required:

SC/SB, 6.2 Ft Bed, 119" Wheelbase **No Extension pipe required**

SC/LB, 8.2 Ft Bed, 133" Wheelbase **17" Extension pipe (05-144170) required**

Step 4: Slip band clamp over expanded end of muffler prior to installation. Now install muffler onto mid-pipe and rubber isolaters.

Step 5: Utilizing the factory isolation mounts now install over-axle/tailpipe and tip. Then align system and tighten all band clamps.

Step 6: Your installation is now complete. It is recommended to re-tighten all exhaust components after 50-100 miles.