




INSTALLATION INSTRUCTIONS

MAKE: Dodge
MODEL: Ram 1500
YEAR: 09-19
ENGINE: 5.7L

Cat -Back Exhaust
49C42072
49C42072NM

NOTE: Will Fit the 2019 Classic

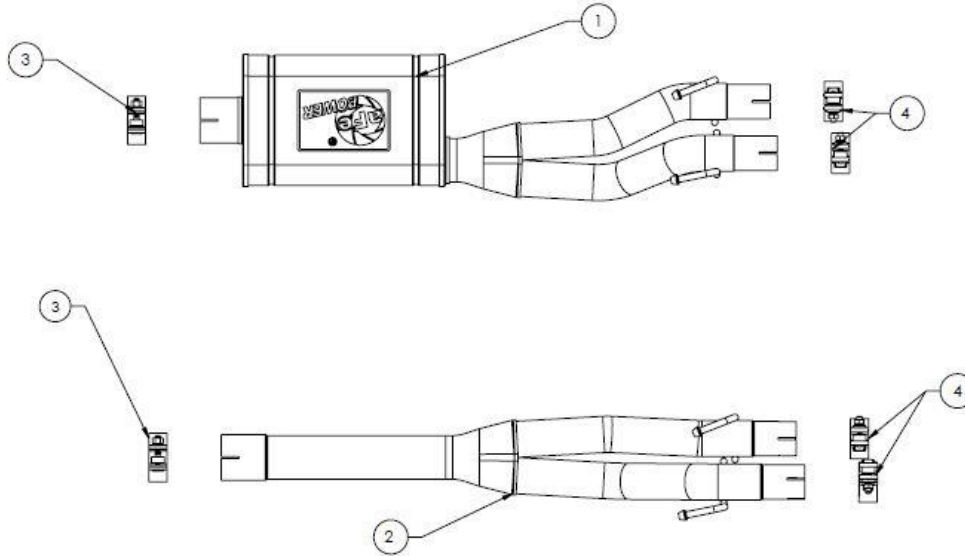

Item	Description	Part Number	Quantity
1	Muffler Assembly	05-144784	1
2	Muffler Delete	05-144783	1
3	Clamps 3"	05-41055	1
4	Clamps 2.5"	05-41210	2

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.





INSTALLATION INSTRUCTIONS

MAKE: Dodge
MODEL: Ram 1500
YEAR: 09-19
ENGINE: 5.7L

Cat -Back Exhaust

49C42072
49C42072NM

NOTE: Will Fit the 2019 Classic

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. Remove the Driver's side tailpipe at the rear of the muffler.
6. Remove the Passenger side tailpipe at the rear of the muffler.
7. Remove the O.E. muffler assembly at the clamp in front of the muffler.
8. Install the aFe POWER Muffler Delete or Muffler Replacement using the provided 3" band clamp. Slide the hangers into the O.E. isolation mounts.
9. Now install the driver's side tailpipe using the provided 2.25" band clamp. Slide the hangers back into the O.E. isolation mounts.
10. Now install the Passenger's side tailpipe using the provided 2.25" band clamp. Slide the hangers back into the O.E. isolation mounts.
11. Note: You may need to loosen the O.E. tips and adjust them to fit in the center of the bumper cut outs.
12. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
13. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
14. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
15. Remove vehicle from jacks stands.
16. It is recommended to re-tighten all clamps and hardware after 50-100 miles.