



Dynamic Air Scoop Installation Instructions: BMW '01-'06 E46 M3 Magnum FORCE Super Stock D.A.S.

Kit P/N:	54-10468, 55-10460, 55-10461	
Magnum FORCE Super Stock Dynamic Air Scoop		
Make:	BMW	
Model:	Year:	Engine:
E46 M3	01-06	L6-3.2L

Tools Required:
Screwdriver, Phillips
Pliers or Panel Popper

Parts List:
1 05-01045 D.A.S.



Complete Kit

Note: Your vehicle may differ from vehicle in photos.

advanced FLOW engineering
252 Granite Street
Corona, CA 92879
Support: 951-493-7100
aFepower.com

Step 1



Complete Stock Configuration.

Step 2



Remove inlet duct retaining pins and inlet duct.

Step 3




Remove retaining screws. (2)

Step 4



Gently pull grill forward to insert the aFe DAS.

Step 5

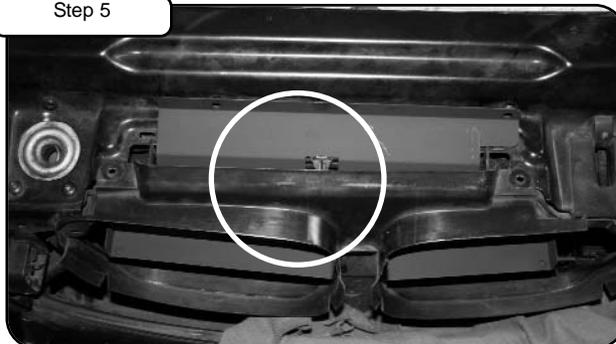

Grill support should pass through the clearance hole in the DAS.

Step 6



Replace the screws removed in step 3.

Step 7



Scoops with screw installed.

Step 8



Replace inlet duct and retaining pins and enjoy your aFe DAS.
NOTE: Place enclosed CARB EO sticker on or near the device on a smooth, clean surface. EO identification label is required to pass the smog test inspection.