

## 2024+ Tesla Model 3 Highland Mud Flap Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO →**

[www.rallyarmor.com/support](http://www.rallyarmor.com/support)

**Recommended Tools** Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick.

**ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

| <b>MF122 KIT CONTENTS</b> <i>CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION</i>        |                         |                 |
|--|-------------------------|-----------------|
| <b>MUD FLAP KIT PN MF122</b> <i>SEE PAGE 3 DRAWINGS</i>                                      | <b>PART DESCRIPTION</b> | <b>QUANTITY</b> |
| <b>MF122-LF</b>  | LEFT FRONT              | <b>1</b>        |
| <b>MF122-RF</b>  | RIGHT FRONT             | <b>1</b>        |
| <b>MF122-LR</b>  | LEFT REAR               | <b>1</b>        |
| <b>MF122-RR</b>  | RIGHT REAR              | <b>1</b>        |
| <b>BRACKET KIT PN BMF92</b>  |                         |                 |
| BMF92-FRT  | BRACKET REAR            | <b>2</b>        |
| <b>HARDWARE KIT PN HMF122</b>  |                         |                 |
| 15TAB     | TAB                     | <b>2</b>        |
| 1SS#8     | SCREW                   | <b>10</b>       |
| EXPANCH   | ANCHOR                  | <b>10</b>       |
| RACLP     | CLIP                    | <b>4</b>        |
| SMWASH    | WASHER                  | <b>10</b>       |

**2024+ Tesla Model 3 Highland Mud Flap Installation Instructions**

**FRONT FLAP** To access interior wheel well, turn steering wheel towards installation side.

**Do not fully tighten fasteners until flap is fully aligned to vehicle.**

**Bracket/Hardware 1 x Flap → 4 x 1SS#8; 4 x EXPANCH; 4 x SMWASH**

**FIGURE A** Remove fasteners 1 - 4.

**FIGURE B** Fold EXPANCH, then install into mounts 1 - 4. Use a pick to expand EXPANCH by inserting 1" into its center.

**FIGURE C** Place logo-side of flap facing vehicle rear. Install SMWASH & 1SS#8 into mounts 1 - 4.

Align flaps to even ground and coverage. Tighten fasteners until washers are just seated against flap.



**REAR FLAP** Do not fully tighten fasteners until flap is fully aligned to vehicle.


**Bracket/Hardware 1 x Flap → 1 x BMF92-FRT; 1 x 15TAB; 1 x 1SS#8; 1 x EXPANCH; 2 x RACLP; 1 x SMWASH**

**FIGURE D** Remove fastener 1. Fold EXPANCH, then install into mount 1. Use a pick to expand EXPANCH by inserting 1" into its center.

**FIGURE E** Position BMF92-FRT over mud flap mount 1. Clip RACLP over flap & BMF92-FRT. Place logo-side of flap facing vehicle rear.

Install SMWASH & 1SS#8 into mount 1.

**FIGURE F** Approximately 2" inches down from the topmost point of flap, adhere 15TAB behind bumper lip (not onto plastic liner). Clip RACLP over flap and 15TAB.

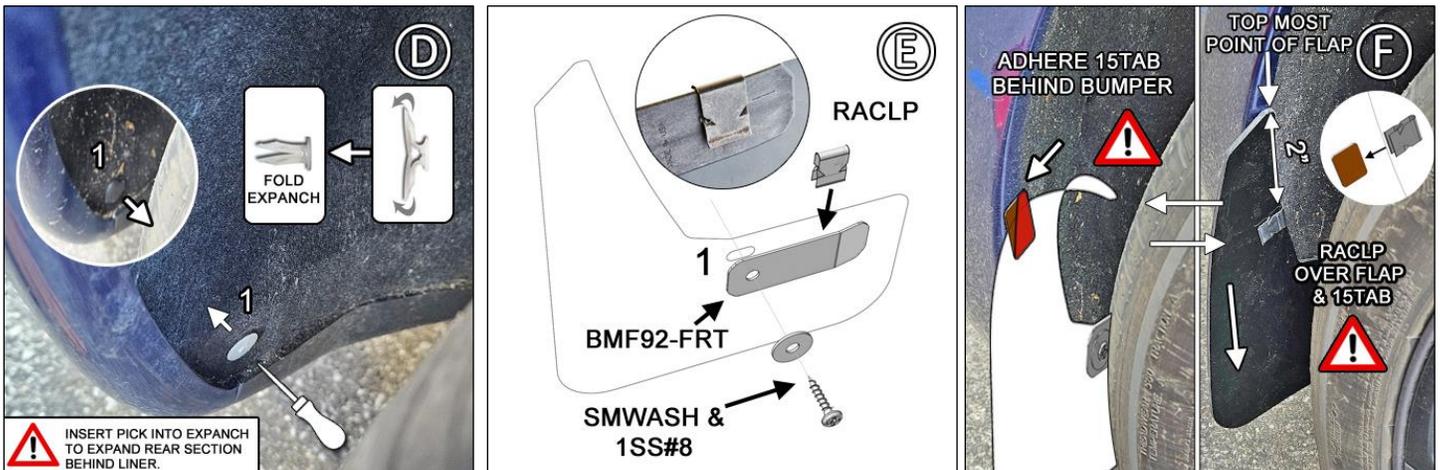

**2024+ Tesla Model 3 Highland Mud Flap Installation Instructions**



FRONT

MF122 MOUNTING DIAGRAM

REAR

