

IMF126



2024+ Ford Mustang Installation Instructions View online www.rallyarmor.com



Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking.


Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick, needle nose plier.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD Polyurethane is a high grade plastic that may have superficial surface marks that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION		
MUD FLAP KIT PN MF126 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF126-LF	LEFT FRONT	1
MF126-RF	RIGHT FRONT	1
MF126-LR	LEFT REAR	1
MF126-RR	RIGHT REAR	1
BRACKET KIT PN BMF126		
BMF126-1 	BRACKET FRONT	2
BMF126-2 	BRACKET REAR	2
HARDWARE KIT PN HMF126		
.75SP 	SPACER	2
1.5SP 	SPACER 2	2
1SS 	SCREW	6
3.5SS 	LONG SCREW	2
BLKNUT 	NUT	4
HXBLT 	BOLT	4
INS3 	INSERT	2
INS5 	INSERT 2	4
RACLIP 	CLIP	2
SMWASH 	WASHER	16
UNUT2 	CLIP 2	2
ZNUT 	CLIP 3	2

Do not fully tighten fasteners until flaps are aligned to vehicle.

FRONT FLAP Access interior wheel well by turning steering wheel towards the installation side.



2024+ Ford Mustang Installation Instructions View online www.rallyarmor.com

Parts x 1 Flap → 1 x BMF126-1; 2 x 1SS; 2 x INS5; 1 x INS3; 1 x RACLP; 2 x SMWASH

IMAGE A If equipped, remove factory splash guards. Remove fasteners 1 - 3.

IMAGE B Remove/discard INS5 inner stem. Install INS5 into mounts 2 & 3.

IMAGE C Place logo-side of flap on vehicle, facing rear bumper and BMF126-1 over flap/liner. Install INS3 into mount 1.


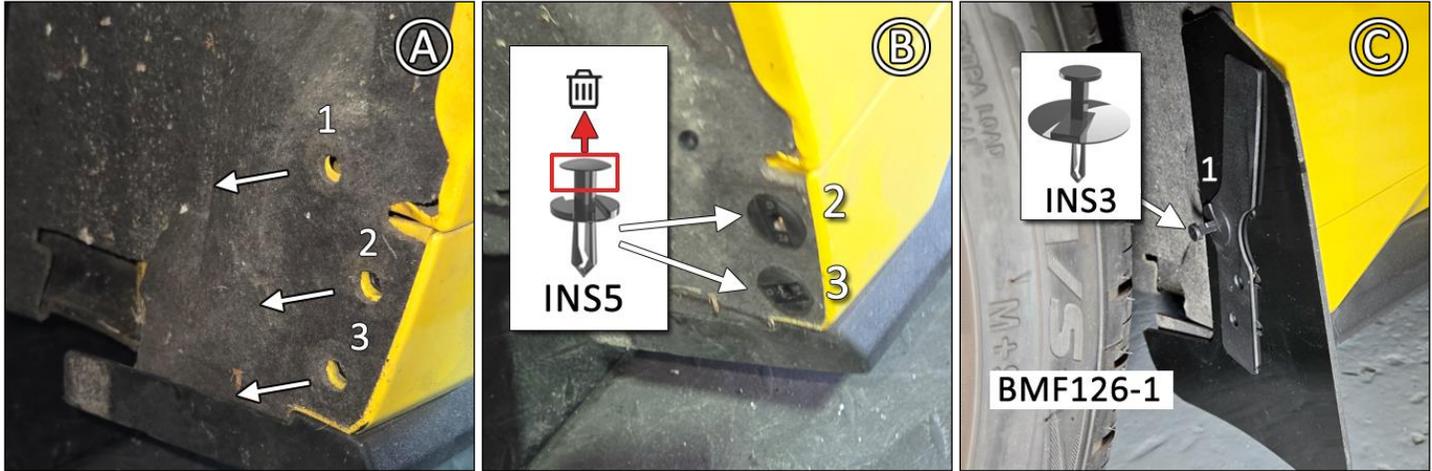


IMAGE D Install SMWASH & 1SS into mounts 2 & 3.

IMAGE E Align flap to vehicle before fully tightening fasteners.

IMAGE F Install RACLP over flap and side skirt.

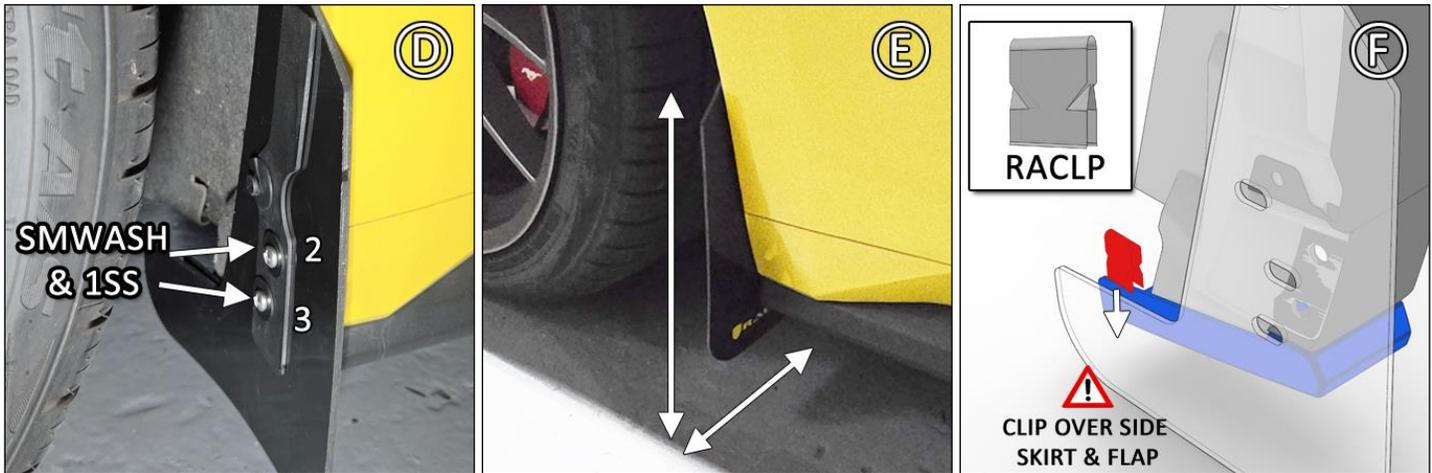

REAR FLAP Parts x 1 Flap → 1 x BMF126-2; 1 x .75SP; 1 x 1.5SP; 1 x 1SS; 1 x 3.5SS; 2 x BLKNUT; 2 x HXBLT;

6 x SMWASH; 1 x UNUT2; 1 x ZNUT

IMAGE G If equipped, remove factory splash guards. Uninstall fasteners 2 & 3. **Temporarily** remove fastener 1. Pull liner aside.

IMAGE H Remove both factory bolts. Pull inner bumper mount aside.

IMAGE I Install ZNUT over mount 2. Reinstall inner bumper mount. Install UNUT2 over mount 3.



2024+ Ford Mustang Installation Instructions View online www.rallyarmor.com



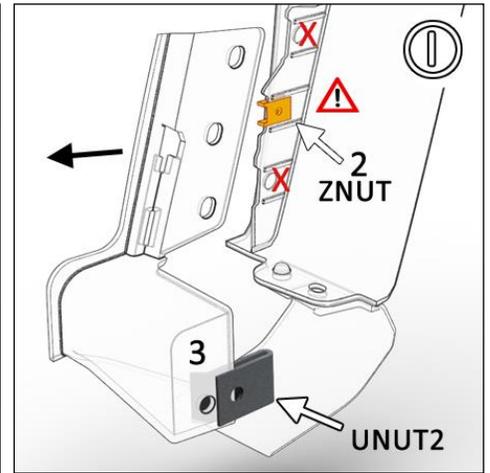


IMAGE J Reinstall liner and factory fastener 1.

IMAGE K Position logo-side of flap on vehicle, facing rear bumper. Place BMF126-2 over flap. Install SMWASH & HXBLT into BMF126-2 mounts 1 & 5 and SMWASH & BLKNUT on reverse side. Place .75SP & 1.5SP behind flap & over liner mount 2. Install SMWASH & 3.5SS into BMF126-2 mount 2. Fasten SMWASH & 1SS into mount 3.

IMAGE L Align flap to vehicle before fully tightening fasteners.

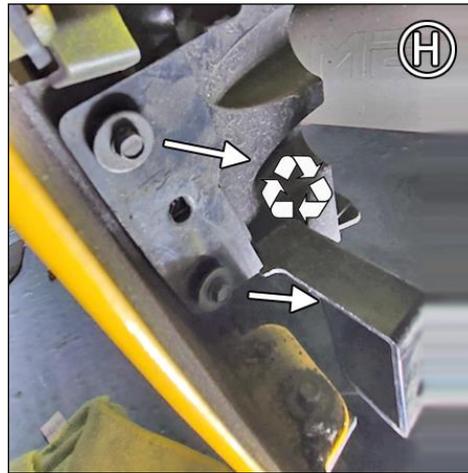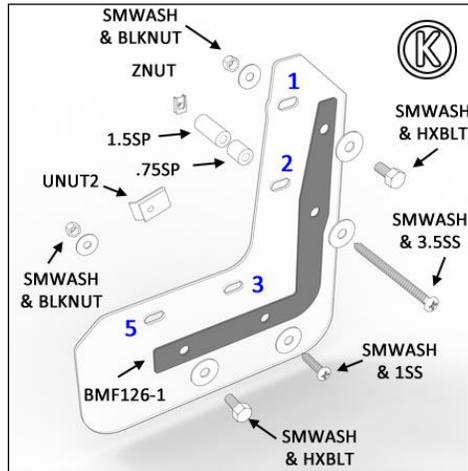

IMF126



2024+ Ford Mustang Installation Instructions [View online www.rallyarmor.com](http://www.rallyarmor.com)

