

2023+ Acura Integra Type S Mud Flap Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking.











Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick, needle nose plier.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF129 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION			
MUD FLAP KIT PN MF129	<i>SEE PAGE 4 DRAWINGS</i>	PART DESCRIPTION	QUANTITY
MF129-LF		LEFT FRONT	1
MF129-RF		RIGHT FRONT	1
MF129-LR		LEFT REAR	1
MF129-RR		RIGHT REAR	1
BRACKET PN BMF129			
BMF109-LR		BRACKET LEFT REAR	1
BMF109-RR		BRACKET RIGHT REAR	1
HARDWARE KIT PN HMF129			
1SP		SPACER	2
1SS		SCREW	10
2SS		LONG SCREW	2
BLKNUT		NUT	2
HXBLT		BOLT	2
INS7		INSERT	10
SMF29-1		FOAM SPACER	2
SMWASH		WASHER	18

FRONT FLAP Bracket/Hardware 1 x Flap → 1 x 1SP; 2 x 1SS; 1 x 2SS; 4 x SMWASH; OPTIONAL 2 x INS7

To gain access inner wheel well area, turn steering wheel towards installation side. **Do not fully tighten fasteners until mud flap is completely aligned to vehicle.**

2023+ Acura Integra Type S Mud Flap Installation Instructions

FIGURE A If equipped with factory splash guards, remove guards and screws 1 – 4.


FIGURE B For vehicles without factory splash guards and fasteners 1 & 2 do not exist, install INS7 into mounts 1 & 2. If factory fasteners do exist, temporarily remove.

FIGURE C Place 1SP over mount 4, between liner and flap.



FIGURE D Position logo-side of flap facing vehicle rear. Install SMWASH & 2SS into mount 4, through 1SP. Fasten SMWASH & 1SS into mounts 1 & 2 and SMWASH & factory screw into mount 3.

FIGURE E/F Check clearance between tire and flap. Align flaps to even ground before tightening fasteners until washers just seat against flap.

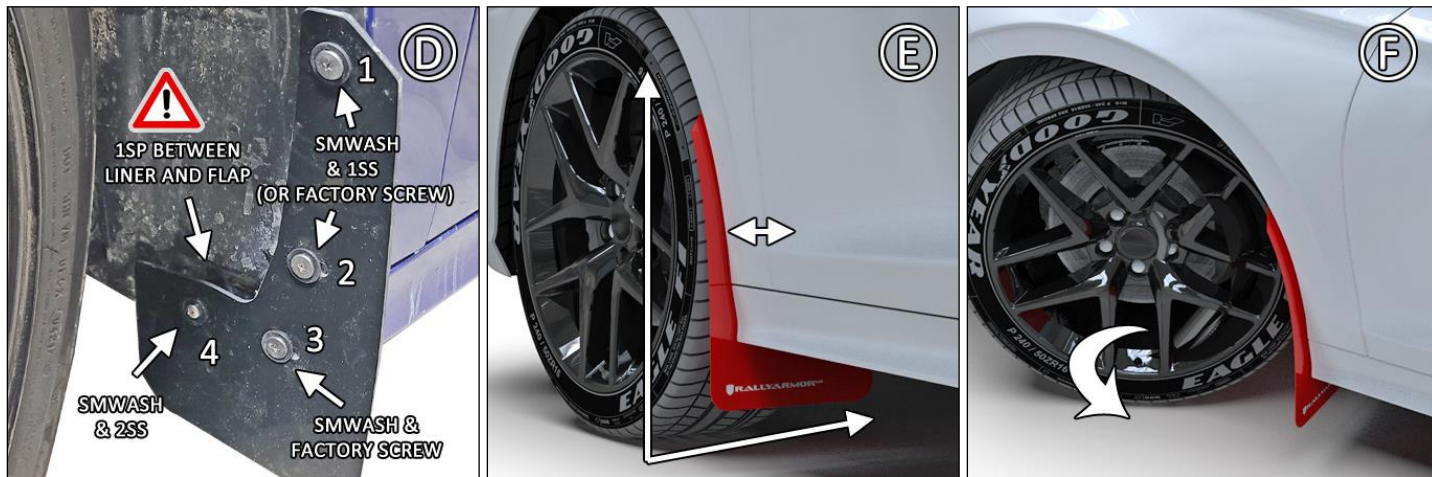

REAR FLAP Bracket & Hardware 1 x Flap → BMF109-LR/RR; 3 x 1SS; 1 x BLKNUT; 1 x HXBLT; 3 x INS7; 1 x SMF29-1; 5 x SMWASH

Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

FIGURE G/H Temporarily remove factory screw 1 and underbody screw 6.

FIGURE I Press INS7 into BMF109-LR/RR mounts 3 - 5. Use needle nose plier to compress INS7 stems and seat flush.

2023+ Acura Integra Type S Mud Flap Installation Instructions



FIGURE J/K Adhere SMF29-1 onto mount 6 of BMF109-LR/RR. Place HXBLT through mount 2.

FIGURE L/M Install BMF109-LR/RR between bumper and liner. Reinstall factory screw into mount 6.


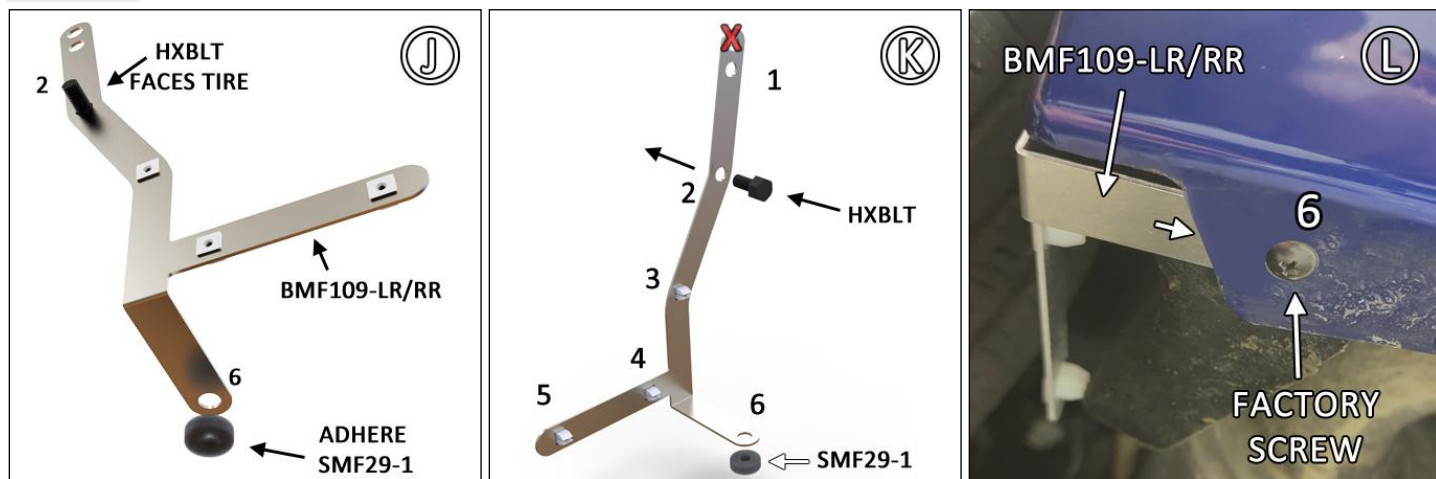


FIGURE N Place logo-side of flap against BMF109-LR/RR. Install SMWASH & factory screw into mount 1 and SMWASH & BLKNUT onto mount 2. Install SMWASH & 1SS into mounts 3 - 5.

FIGURE O Align flaps to even ground before tightening fasteners, until washers just seat against flap.



IMF129

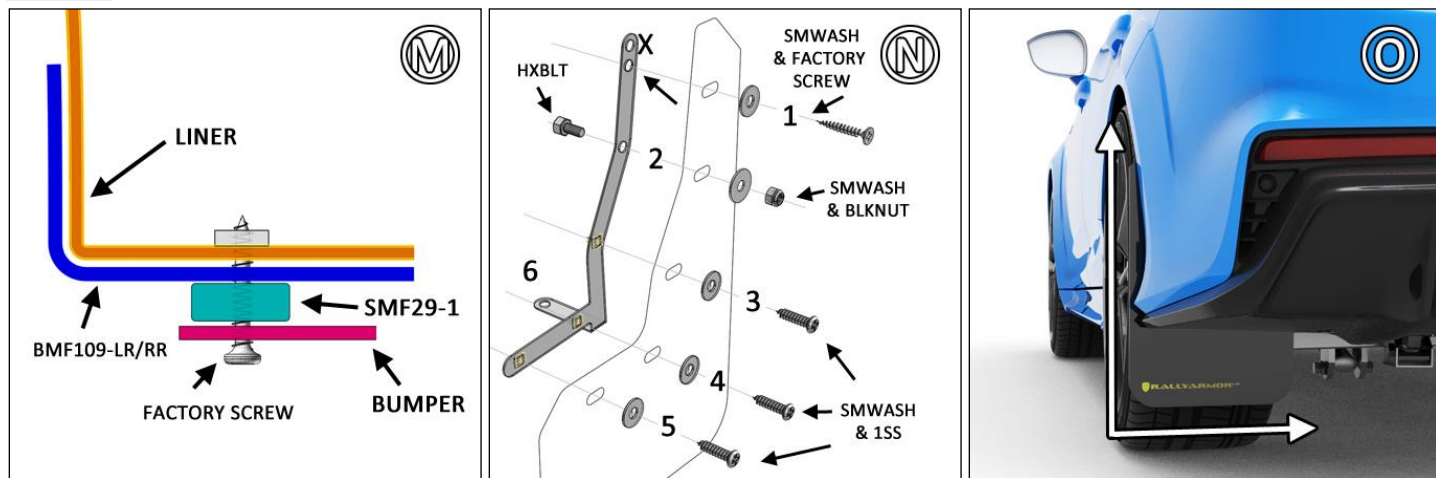

2023+ Acura Integra Type S Mud Flap Installation Instructions

