


# T5198

2015-UP FORD  
MUSTANG WITH QUAD TIP EXHAUST  
4" TIP COVER KIT

# MBRP®

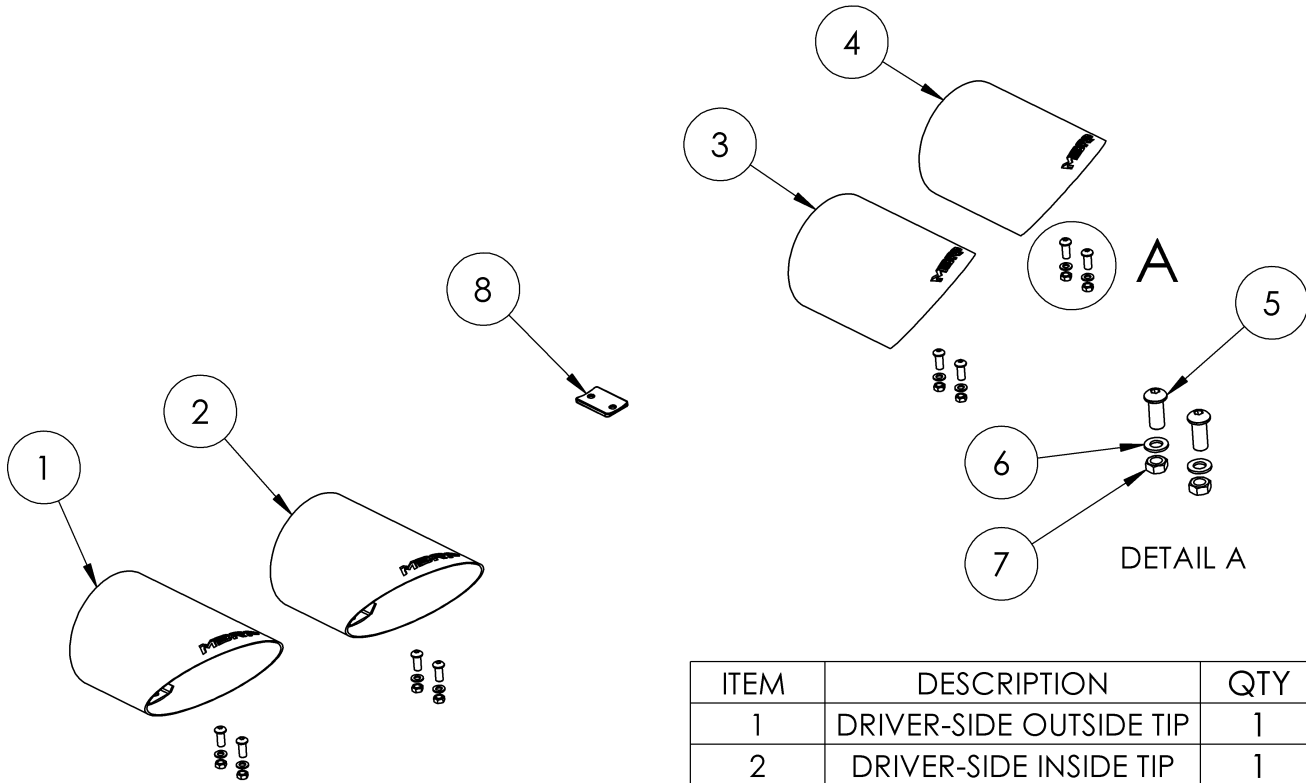

ITEM	DESCRIPTION	QTY
1	DRIVER-SIDE OUTSIDE TIP	1
2	DRIVER-SIDE INSIDE TIP	1
3	PASSENGER INSIDE TIP	1
4	PASSENGER OUTSIDE TIP	1
5	M5 BOLT	8
6	M5 FLAT WASHER	8
7	M5 LOCK NUT	8
8	DRILL GUIDE	1

Refer to this LOT NUMBER when contacting customer service: \_\_\_\_\_

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

# MBRP

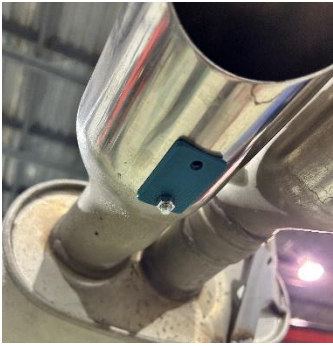


Figure 1

This kit requires drilling holes in the stock exhaust tips. This will be very difficult without sharp drill bits, a centering punch or centering bit, and cutting fluid. Please consider professional installation if you do not have the recommended tools.

## Installation of MBRP Exhaust Tip Covers

1. Install the **Drill Guide** on to the factory exhaust tip with the included M5 hardware through the drain hole. Mark the second hole location. Repeat on each factory exhaust tip.  
**Refer to Figure 1.**

2. Using a 5.5mm or 7/32" drill bit, drill the marked holes on each tip. A center punch or centering drill bit is recommended to begin the hole and guide the drill bit on the curved surface. Cutting fluid is highly recommended.  
**Refer to Figure 2.**



Figure 2

3. Deburr the new holes of any sharp edges. Identify each of the four **MBRP Exhaust Tip Covers** as **Driver-Side** or **Passenger-Side**, and **Inside** or **Outside**.



4. Install each **Tip** onto the factory exhaust by inserting the **M5 Hex Bolts** (2 per tip) through the factory tip from the inside and sliding the corresponding **Tip** over the factory exhaust. Set each **Tip** at the desired distance from the bumper and secure with the **M5 Flat Washer** and **M5 Lock nut**. Do not overtighten the hardware as it will distort the **Tip** and the **Tip** will not align properly with the stock exhaust.  
**Refer to Figures 3 and 4.**



Figure 3

5. Inspect the **MBRP Exhaust Tip Covers** for any interference. If there is any interference detected, relocate, or adjust to provide adequate clearance. Ensure all hardware connections are secure and components are unable to rotate or slide. Verify clearances, system security and hardware after 30-60 miles (50-100 km) of driving.



Figure 4

**Congratulations!** You are ready to begin experiencing the improved appearance of your **MBRP** Exhaust Tip Covers. We know you will enjoy your purchase!